


REPLACING 131020W CASTER WHEEL


PARTS LIST

Description	Qty.	Part Number
Caster wheel - 5" x 1-1/4" gray polyurethane	1	131020W

TOOLS REQUIRED



- 1. Using the (2) wrenches, remove the caster wheel axle lock nut and axle.
- 2. Slide the old wheel out of the caster frame.
- 3. Slide the new wheel into the caster frame.
- 4. Align the caster wheel bearing with the hole in the caster frame and insert the wheel axle.
- 5. Thread on the lock nut and tighten to 120-140 inch lbs.

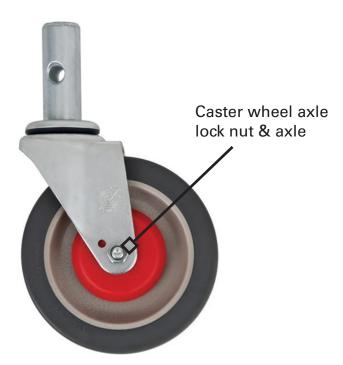

131020 Caster Assembly



Magline, Inc.

1205 W. Cedar Street • Standish, MI 48658 USA 1-800-MAGLINE (624-5463) • (989) 512-1000 (outside U.S. & Canada) www.magliner.com